OPTIONAL:

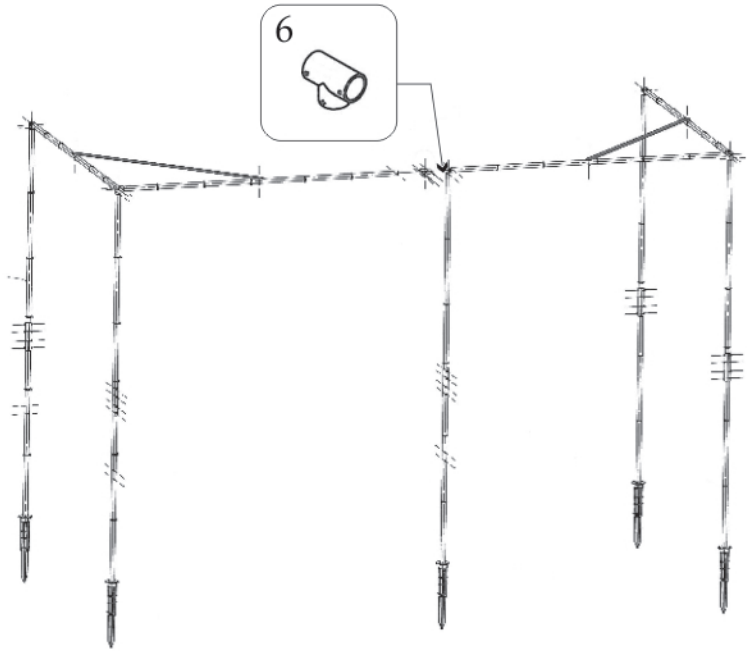

OPTIONAL: To add a second adjacent Veggie Wall Kit to the same garden bed, change one L-connector(4) to a T-connector (6) as shown in the diagram attached. When you do this, one vertical tube is not needed.

Manufactured and Distributed by
Scenery Solutions, Inc.
222 Grace Church Street, Suite 302
Port Chester, NY 10573

Questions Call: 800-914-9835
admin@frameitall.com

Printed by China

Veggie Wall Kit Instructions

PART LIST

No.	Part No	Description	QTY. (Usage)	QTY. (Backup)
1	S-001	Stake	3	0
2	AS-001	Stake cover	3	0
3	C-001	Half connector	6	0
4	C-002L	L connector	2	0
5	C-003F	F connector	1	0
6	C-006T	T connector	1	0
7	T-001	Long tube	2	0
8	T-002	Lower tube	3	0
9	T-003	Upper tube	3	0
10	AS-003	Cross brace	1	0
11	AS-004	Net	1	0
12	AC-002	tie	25	2
13	AC-003	Washer	28	2
14	AC-004	Spring washer	14	2
15	AC-005	Ball nut	12	2
16	AC-006	M4X30 bolt	2	0
17	AC-007	M4X22 screw	14	2
18	AC-008	Nut	7	1

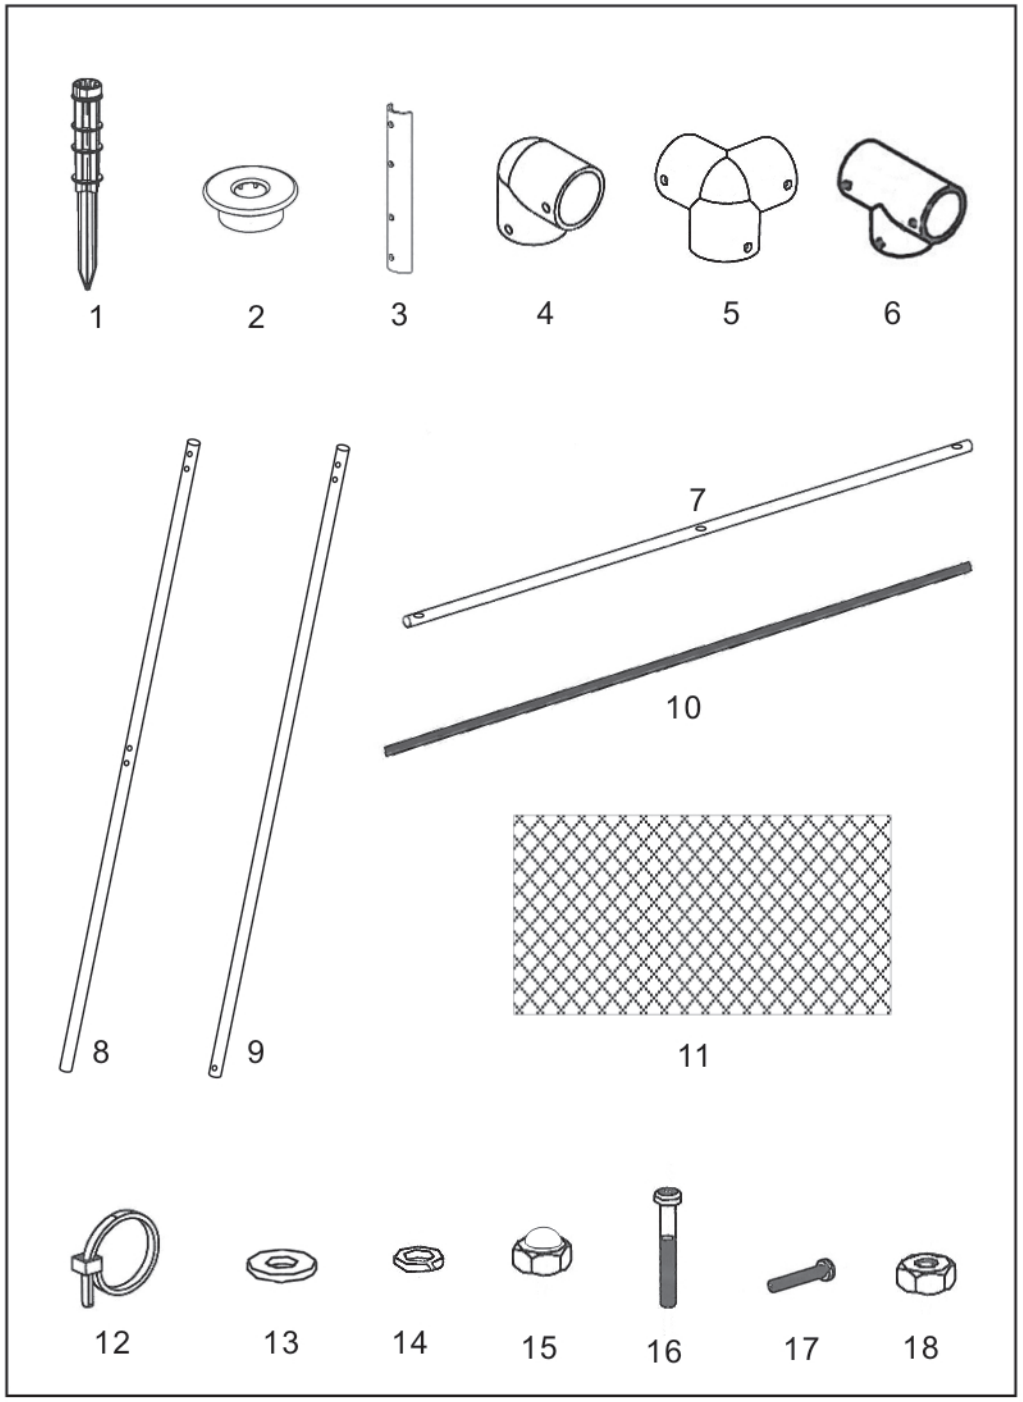

INSTALLATION

STEP1.
Insert the lower tube(8) into the pre-assembled connector(3). Then push the bolts(16) with washer(13) through the tube, add washers (13, 14) and completely tighten all nuts(15). Repeat with the second and third tubes (8) and pre-assembled connectors(3).

STEP 2.
Insert the pre-assembled long tube(7) into the F- connector(5) In the other pre-assembled long tube. Insert screw(17) and tighten. Note that the screw does not sit flush so it can be used a hook to hold the net in place (See STEP 5). Position the assembled L-Section on the ground with the open connector holes facing down and position the cross brace(10) above the tubes(7). Next, push the bolts (16) with washer(13) through the cross brace and tube, add washers(13, 14) and completely tighten all nuts (18).

STEP 3.
Insert the three already assembled tubes into the two L-connectors(4) and into the F-connector(5). For all three tubes, the holes on the middle of the lower tube(8) should face out, insert screws(17) and tighten.

STEP4.
Take the entire assembled frame and insert it into the top of 3 adjacent garden stakes in your garden bed.

STEP5.
Open the green net(11) completely. Holding the net in position on the frame (using the screws (17) as hooks), use the cable ties(12) to affix the net onto the frame. Do this by starting at the top and affixing 5 ties to each of the upper horizontal tubes, and then affixing 5 ties to each of the three vertical tubes. For best results equally space all ties.

STEP1:

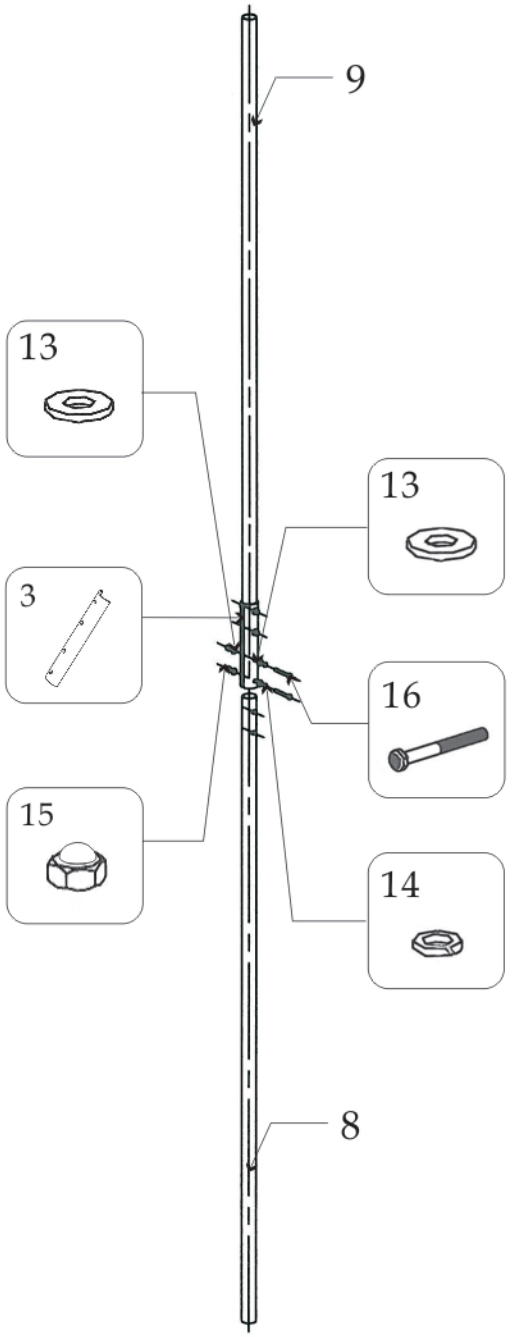

STEP2:

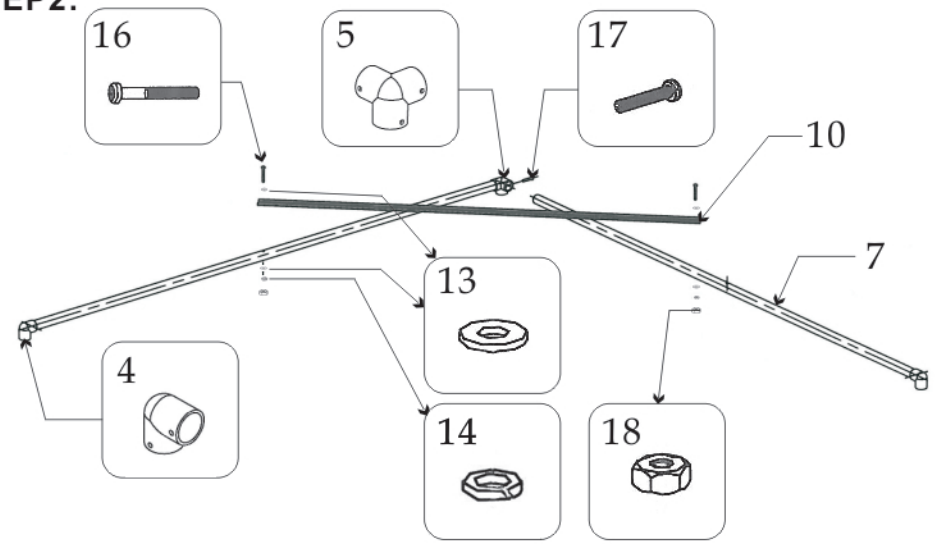

STEP3:

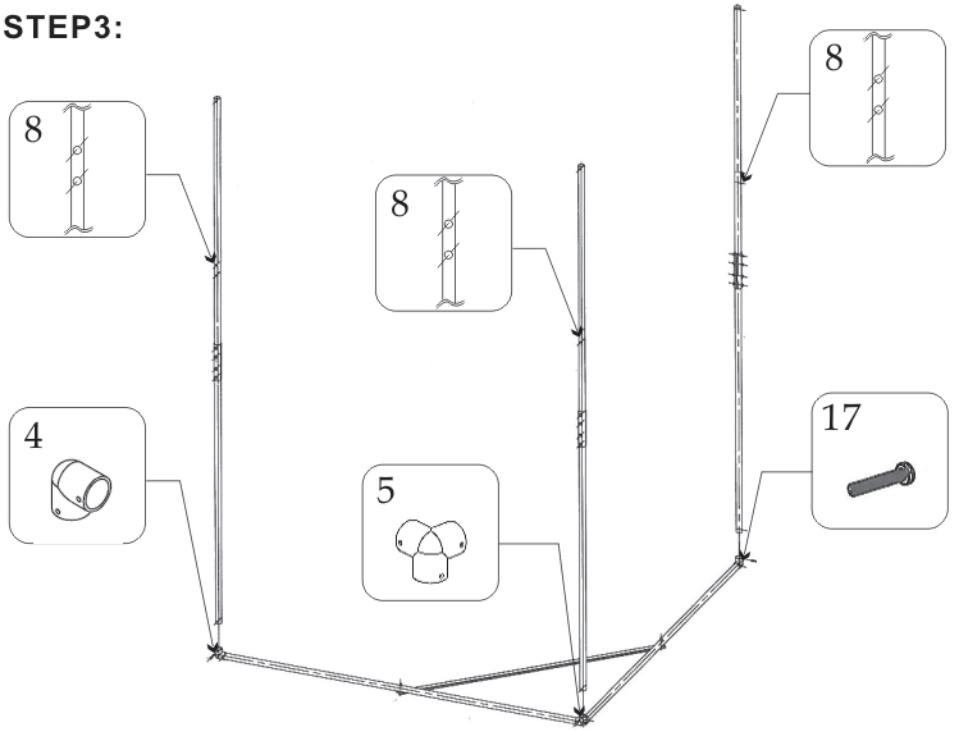

STEP4:

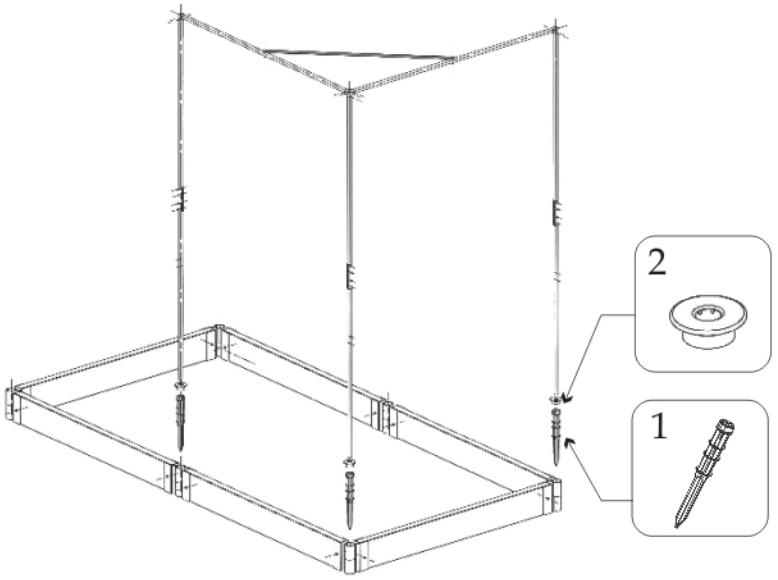

STEP5: